



SCANDINAVIAN
TEAK DECK AB







Instructions for installation of Flexiteek



Materials and tools

The materials needed for the installation of Flexiteek decks are the following: Glue based on MS Polymer, for ex. Simson MSR CA or Fixtech MSP 300, primer, red ethanol and acetone.

You will need the following tools: Comb spatula (2 mm), sandpaper (80), a pencil, tape and a water spraycanister.

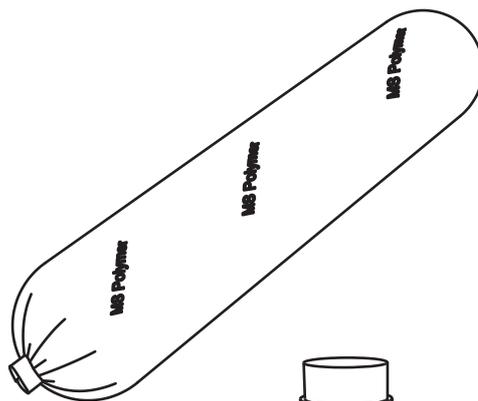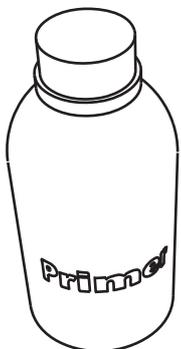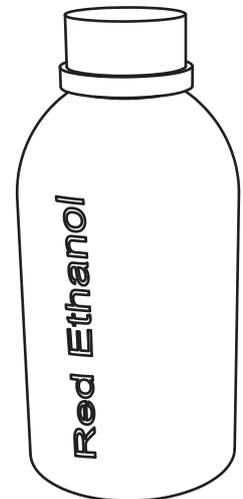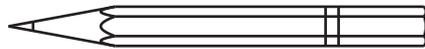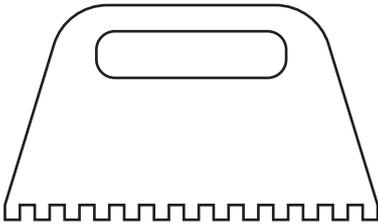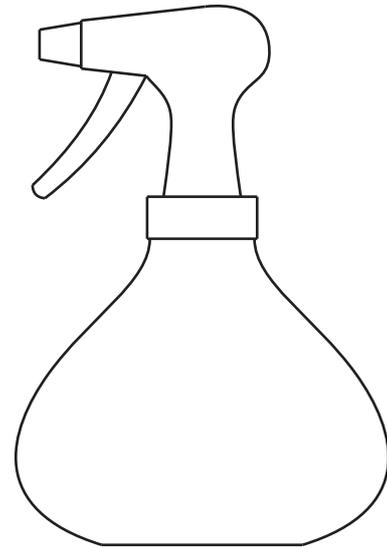



SCANDINAVIAN
TEAK DECK AB

Instructions for the installation of Flexiteek

Start by placing the different Flexiteek panels in the places designated.

If there are Flexiteek panels that are to be placed lengthwise one after the other, check that the joints are in a straight line.





Sand down the areas of the deck where the Flexiteek is to be placed until clean and smooth. All uneven areas have to be sanded down and all of the dirt and grease have to be removed. It is important to remove the shiny surface.

Afterwards, wash off all of the dust from the deck using acetone.

Sandpaper the underside of the Flexiteek panels lightly; the glue will then adhere better. Then remove the dust using a brush.

Next spread a thin layer of primer on the surfaces where the Flexiteek is to be laid. Also prime the underside of the Flexiteek panels and leave to dry for about half an hour, but no more than 24 hours before gluing it on.

Primer






SCANDINAVIAN
TEAK DECK AB

Afterwards use a 2 mm comb spatula to spread out an even layer of glue on the surfaces that have been primed. Then spray a mist of water over the layer of glue. The glue needs moisture in order to cure.

Glue: Based on MS Polymer, for ex. Simson MSR CA or Fixtech MSP 300 , 900 ml/m²

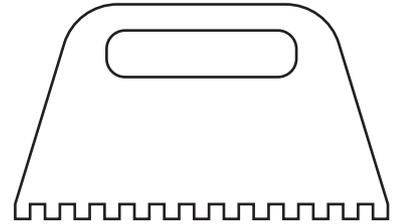



Carefully put the Flexiteek panels into place.


Then press down the Flexiteek panels in order to remove all of the air. After that, put a flat board with weights on top of the Flexiteek. It is important to use enough weight in order for the Flexiteek deck to set well and become even. Tape down the corners in order to get them down better.

Spray some soapy water on the surplus glue that exudes from the edges of the Flexiteek deck. Then remove the surplus glue with for example a wooden stick.

Finish by washing off the last surplus glue using Epoxy thinner and a rag.

Let the glue dry for 48 hours before walking on the deck.

The Flexiteek deck is now installed!

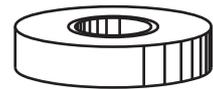



SCANDINAVIAN
TEAK DECK AB

If you have questions, please contact:

Scandinavian Teak Deck AB
Fabriksvägen 5
68700 Terjärv
Finland
Tel. +358 (0)6-867 5850
Fax +358 (0)6-867 5536
info@stdeck.fi

